

SPECS

Minimum Rider Height: 4' 11" Maximum Rider Height: 6' 2"

adRunner Blu

Jser Guide Instructions

Maximum Speed: 20 mph

Estimated Range: 25 miles



5 E-Bike Speeds: Up/down arrow buttons on the left handle

7 Gears - Rear Hub Only Right handle

Throttle Right handle

Front LED Headlight & Integrated Rear Light operated from the display



Press and hold **mode button** to turn on/off.



Press up/down arrow buttons to change pedal assist level.

Left Handle

Push the **up arrow and mode button at the same time** to activate the front headlight, the taillight, the brake light.



Press lever to shift gears "down" (easier to pedal, good for uphill).

Twist downwards to engage throttle.

Right Handle

Press + button to shift gears "up" (harder to pedal, good for downhill).



2: Trip Distance & Odometer. Use mode button to switch between odometer and trip distance.



4: Pedal assist level (0-5). Press up/down arrows to change level.

level



Charging port